

Catalogue No.

20684-128

飯碗

飯碗・茶碗



569 11 028
風砂 12cm飯碗
D-12 H-6.4
C-370cc ¥1,400



569 81 028
氷華 12cm飯碗
D-12 H-6.4
C-370cc ¥1,400



569 21 028
穂波 12cm飯碗
D-12 H-6.4
C-370cc ¥1,400



569 82 028
蒼翠 12cm飯碗
D-12 H-6.4
C-370cc ¥1,400



569 42 028
紅月 12cm飯碗
D-12 H-6.4
C-370cc ¥1,400



569 00 028
白虎 12cm飯碗
D-12 H-6.4
C-370cc ¥1,300



569 41 028
朱雀 12cm飯碗
D-12 H-6.4
C-370cc ¥1,300



538 00 020
白涼 飯碗
D-11 H-5.9
C-320cc ¥1,200



538 71 020
静寂 飯碗
D-11 H-5.9
C-320cc ¥1,200



538 31 020
漆黒 飯碗
D-11 H-5.9
C-320cc ¥1,200



545 26 030
ローゼ 飯碗
D-11.8 H-6.4
C-320cc ¥900



545 27 030
若草 飯碗
D-11.8 H-6.4
C-320cc ¥900



545 88 030
月の香 飯碗
D-11.8 H-6.4
C-320cc ¥900



567 81 133
藍七宝 飯碗
D-12.3 H-6.5
C-380cc ¥1,300



567 82 133
藍波花 飯碗
D-12.3 H-6.5
C-380cc ¥1,300



567 83 133
藍格子 飯碗
D-12.3 H-6.5
C-380cc ¥1,300



567 84 133
藍花 飯碗
D-12.3 H-6.5
C-380cc ¥1,300



530 31 030
黒洋 リップル茶碗
D-11.4 H-6.3
C-340cc ¥850



530 79 030
銀彩ブルー リップル茶碗
D-11.4 H-6.3
C-340cc ¥850



530 94 030
花の舞 リップル茶碗
D-11.4 H-6.3
C-340cc ¥900



530 84 030
波の舞 リップル茶碗
D-11.4 H-6.3
C-340cc ¥900



530 74 030
風の舞 リップル茶碗
D-11.4 H-6.3
C-340cc ¥900



530 34 030
雪の舞 リップル茶碗
D-11.4 H-6.3
C-340cc ¥900



530 81 030
藍日傘 リップル茶碗
D-11.4 H-6.3
C-340cc ¥850

飯器



510 27 035
益子ツタ 飯器
D-13 H-7.8 C-595cc ¥950



510 77 035
グリーン志野 飯器
D-13 H-7.8 C-595cc ¥950



510 61 035
美濃伊賀 飯器
D-13 H-7.8 C-595cc ¥950



510 93 035
錦天目 飯器
D-13 H-7.8 C-595cc ¥950



510 08 035
タイスキ 飯器
D-13 H-7.8 C-595cc ¥1,000

ころころ碗



510 01 050
ねーじゅ ころころ碗
D-10.6 H-7
C-345cc ¥850



510 31 050
黒洋 ころころ碗
D-10.6 H-7
C-345cc ¥850



510 38 050
山がすみ ころころ碗
D-10.6 H-7
C-345cc ¥850



510 79 050
銀彩ブルー ころころ碗
D-10.6 H-7
C-345cc ¥850



510 35 050
志野化粧 ころころ碗
D-10.6 H-7
C-345cc ¥850



510 66 050
白露 ころころ碗
D-10.6 H-7
C-345cc ¥850